

Inspection & Maintenance Manual for *TENSA®MODULAR* expansion joints



mageba	Inspection & maintenance manual for mageba TENZA®MODULAR expansion joints	AW 8871	
		Created: COSU	Revision: 01
		Reviewed: MDEL	Date: 08 July 2016
		Approved: NMEN	Page: 2

Contents

1	Applicability	4
2	Importance of inspection and maintenance.....	4
3	Purpose of this Inspection & Maintenance Manual	4
4	Availability and use of relevant information	5
5	Competence of inspection and maintenance personnel.....	6
6	Access for inspections.....	6
7	Inspection types and frequency.....	7
7.1	Inspection types and timing/frequency	7
7.2	Preliminary inspection.....	8
7.3	Comprehensive Inspection.....	8
8	Recording of work carried out.....	8
9	Key points to consider during inspection and maintenance works.....	9
9.1	Watertightness of expansion joint	9
9.2	Condition and adequacy of corrosion protection	9
9.3	Proper alignment of expansion joint.....	9
9.4	Opening and closing capacity of the expansion joint.....	9
9.5	Condition and proper functioning of sliding surfaces	10
9.6	Condition and proper functioning of rubber sealing profiles	10
9.7	Pre-tensioning / Tightness of connections.....	10
9.8	Condition and flatness of connecting pavement / nosing	10
10	Assessment criteria and actions	11
10.1	Noise (1)	11
10.2	Evidence of water leakage (2)	12
10.3	Corrosion protection (3).....	12
10.4	Adjacent main structures (4).....	12
10.5	Alignment of joint (5)	13
10.6	Distribution of gap widths (6).....	14

mageba	Inspection & maintenance manual for mageba TENZA®MODULAR expansion joints	AW 8871	
		Created: COSU	Revision: 01
		Reviewed: MDEL	Date: 08 July 2016
		Approved: NMEN	Page: 3

10.7	Sliding surfaces (7).....	15
10.8	Elastomeric sealing profiles (9)	15
10.9	Replaceable components (10).....	15
10.10	Cover plates (at footpath / fascia / barriers), if any (12).....	16
10.11	Opening and closing capacity of the expansion joint (13)	16
10.12	Bolts (14)	17
10.13	Welds (15)	17
10.14	Noise-reducing “sinus plates”, if any (16)	18
10.15	Connecting pavement / nosing (17)	18
11	Maintenance and repairs.....	19
11.1	General	19
11.2	Cleaning	19
11.3	Repair of corrosion protection	19
11.4	Replacement of an elastomeric sealing profile.....	20
11.5	Connection of sinus plates (if any)	22
11.6	Replacement of replaceable key components.....	23
11.7	Asphalt strengthening / Surface repairs at edge of expansion joint.....	23
	Appendix 1: Inspection Report.....	26