

Installation Manual for structural bearings and seismic isolators



Contents

1	Introduction	4
2	Applicability.....	4
3	Importance of proper installation.....	4
4	Purpose of this Installation Manual	5
5	Introduction to structural bearings.....	5
6	Planning and preparation of installation work	5
6.1	Availability and use of relevant information.....	5
6.2	Materials, tools and equipment	6
7	Competence of installation personnel.....	6
8	Supervision of installation work	6
9	Health and Safety issues during installation.....	7
9.1	Risk of falling from a height.....	7
9.2	Risk of being hit by a large, heavy object during lifting	7
9.3	Risk of damage to health through contact with fresh concrete / mortar / grout etc.....	7
9.4	Risk during welding (if applicable).....	7
9.5	Risk from general construction hazards – use of appropriate PPE	7
10	Care of bearings during and after installation	7
11	Recording of work carried out.....	8
12	Key bearing features.....	8
12.1	Type plate	8
12.2	Movement Scale.....	8
12.3	Pre-setting	9
12.4	Transportation fittings.....	9
12.5	Markings on top of bearing	10
12.6	Levelling surfaces	10
12.7	Dust protection	11
12.8	Anchor plates.....	11
13	Transport, checking and storage of bearings	12
13.1	Transport and handling	12

13.2	Checking of bearings	12
13.3	Storage	12
14	Design of connecting structures.....	13
15	Positioning of bearings	13
15.1	Location (which bearing goes where) and orientation on the structure	13
15.2	Adjustment of presetting	13
15.3	Precise positioning of bearings	14
15.4	Possible method for adjusting elevation or inclination	15
16	General installation requirements.....	15
17	Support of bearings and connection to substructure	16
17.1	Concrete substructure.....	16
17.2	Steel substructure	18
18	Connection of bearings to superstructure	19
18.1	Concrete superstructure	19
18.2	Steel superstructure	19
19	Cutting / removal of transport fittings	20
20	Installation beneath an existing superstructure	20
20.1	Lifting of the superstructure as required	21
20.2	Removal of the existing bearing, and connecting structure as appropriate.....	22
20.3	Preparation of the structure to receive the new bearing	22
20.4	Insertion of a new bearing into position beneath an existing superstructure.....	22
20.5	Precise positioning and adjustment of pre-setting if necessary	24
20.6	Connection of the bearing to the structure	24
20.7	Lowering of raised superstructure to rest on new bearings	26
21	Installation of elastomeric bearings	26
22	Final checking and cleaning of fully installed bearings	28
22.1	Checking and repair of corrosion protection (if applicable)	28
22.2	Cleaning of bearing and confirmation that it is free of obstructions.....	28
22.3	Confirmation of complete and proper installation	28
Appendix 1:	Tools etc. to be provided by the contractor.....	29
Appendix 2:	Installation Report	30